

How to configure Windows PPTP VPN client to FBR-2000 PPTP VPN Server

For FBR-2000


1. Under VPN ◇ PPTP Server, Click on Modify.

The screenshot shows the 'PPTP Server' configuration page in the 'Multi-homing Router' interface. The left sidebar contains a menu with options: System, Interface, Address, Service, Schedule, Content Filtering, Virtual Server, VPN, IPSec Autokey, PPTP Server (highlighted), PPTP Client, Policy, Log, Alarm, Statistics, and Status. The main content area displays 'PPTP Server (Disable) : Client IP Range : 192.73.20.1-254' with a 'Modify' button. Below this is a table with columns: User Name, Client IP, Uptime, Status, and Configure. A 'New Entry' button is located below the table.


2. Enable PPTP, specify the IP range for the VPN client.

The screenshot shows the 'Modify Server Design' dialog box in the 'PPTP Server' configuration page. The dialog has two radio buttons: 'Disable PPTP' and 'Enable PPTP'. The 'Enable PPTP' option is selected. Below it is a checkbox for 'Encryption' which is unchecked. The 'Client IP Range' is set to '192.73.20.1 .. 254'. There is a field for 'Auto-Disconnect if idle' set to '0' minutes, with a note '(0: means always connected)'. The 'Schedule' is set to 'None'. 'OK' and 'Cancel' buttons are at the bottom right.


3. VPN ◇ PPTP Server, click on New Entry.

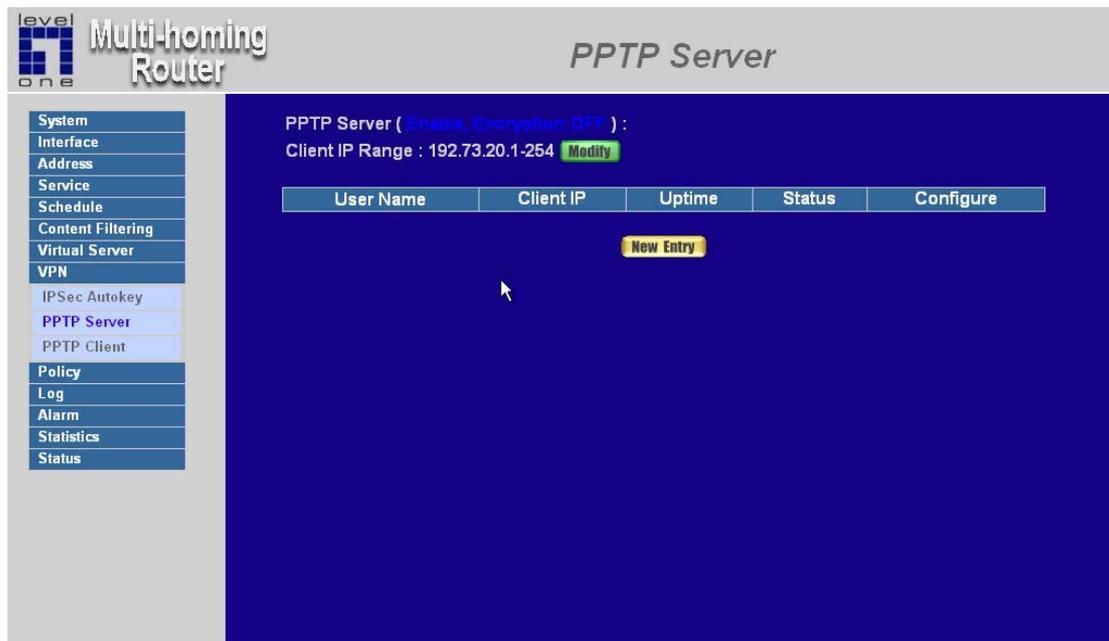

4. Assign user name and password, click on OK.

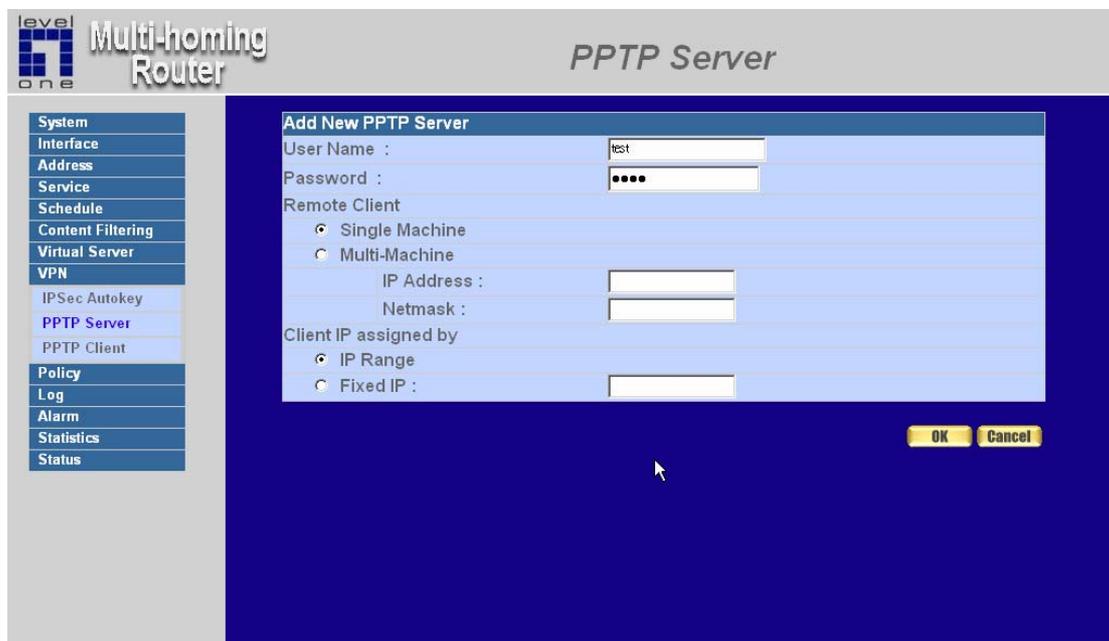


5. Once PPTP client is connected, the status will show Connect.

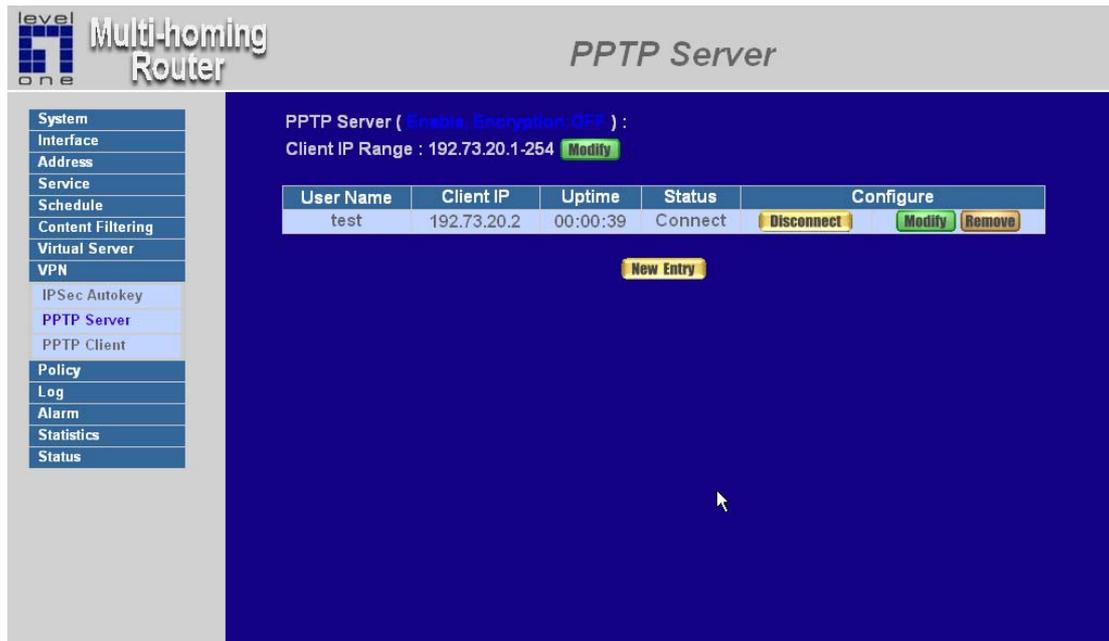

Windows XP PPTP Client

1. In you Network Neighborhood. Create a new connection.

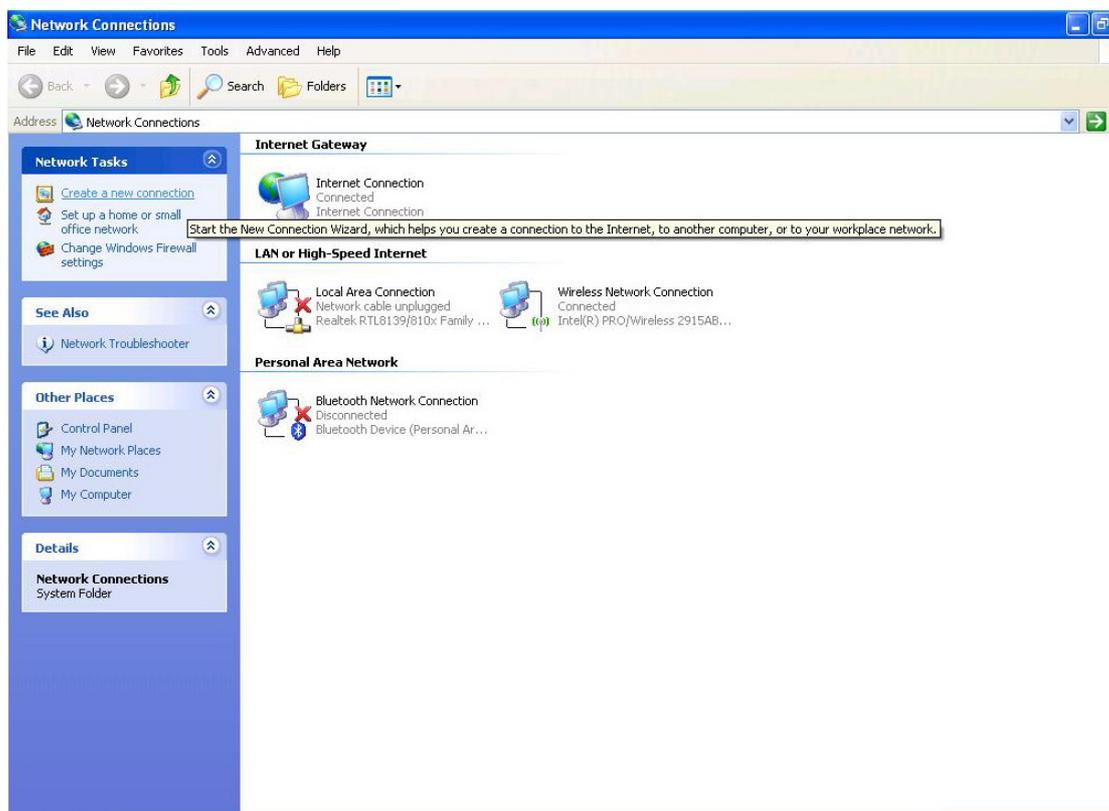

2. Follow the Wizard.



3. Select "Connect to the network at my workplace".



4. Select "Virtual Private Network connection".




5. Give VPN connection a name.




6. Enter the IP address of FBR-2000 PPTP VPN server.




7. Finish

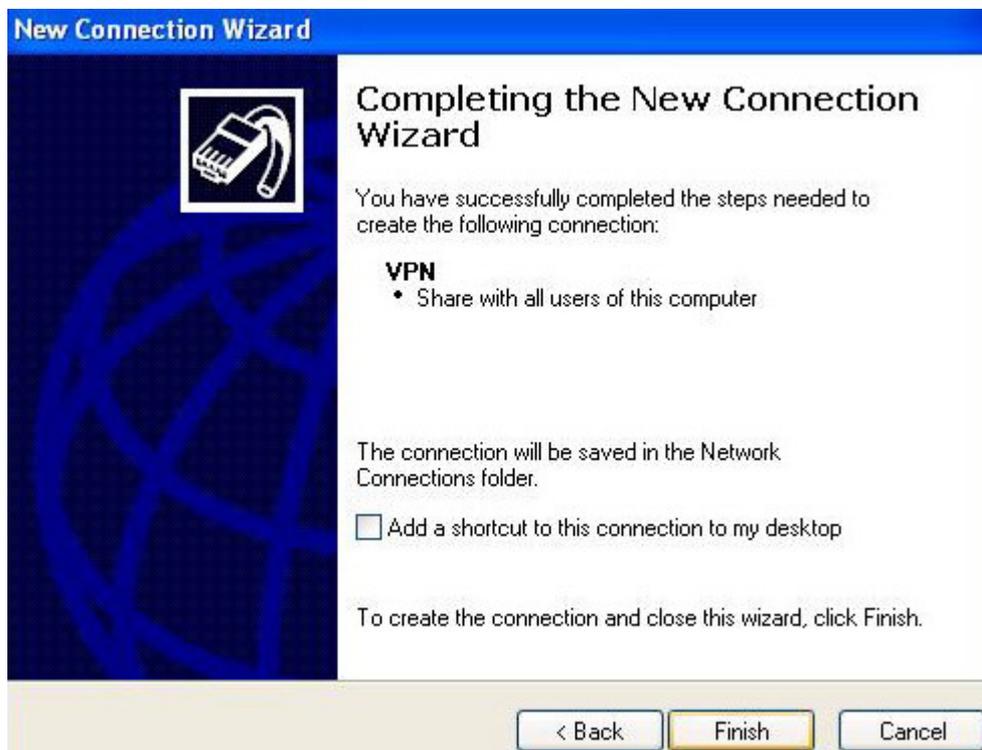


- Right click on “My network neighborhood” you will see the VPN connection you had just created. Double click on it.

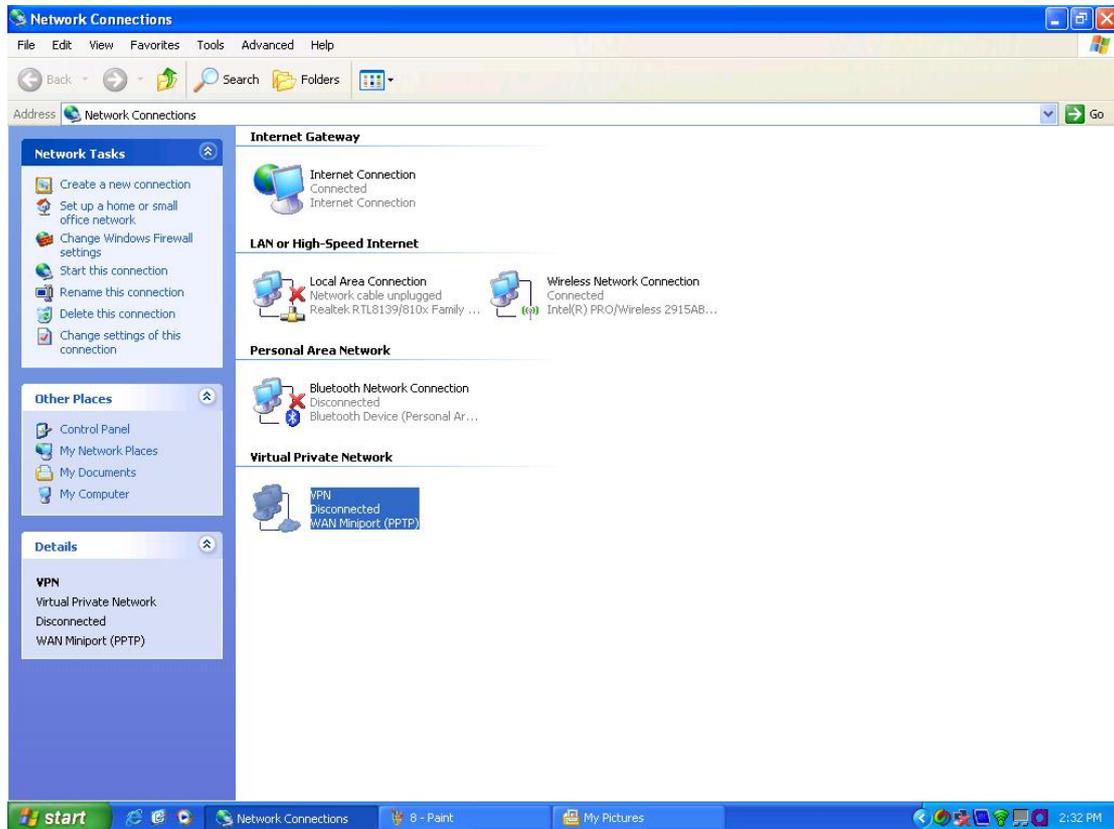

- Enter the username and password configured in FBR-2000 PPTP VPN server. Then click on properties.

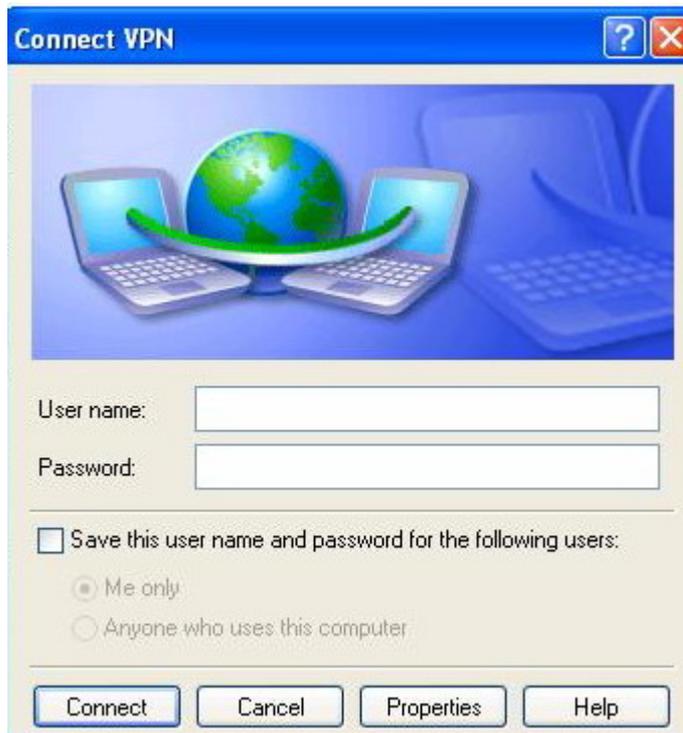


10. Under Security tab ◊ click Advanced ◊ then click on Setting

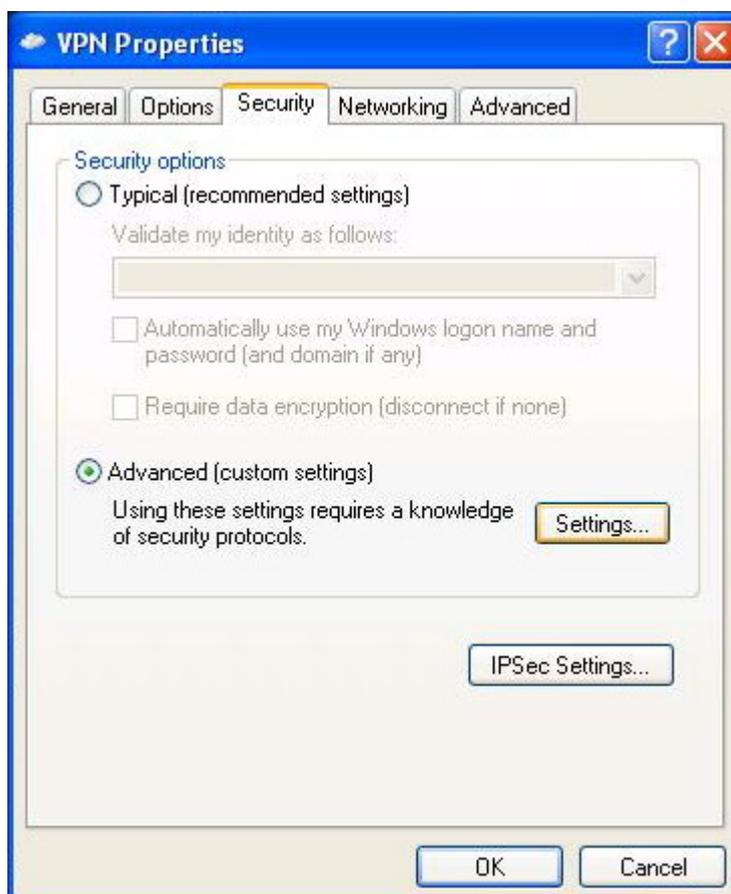

11. Configure as below. Click on OK.



You are connected.

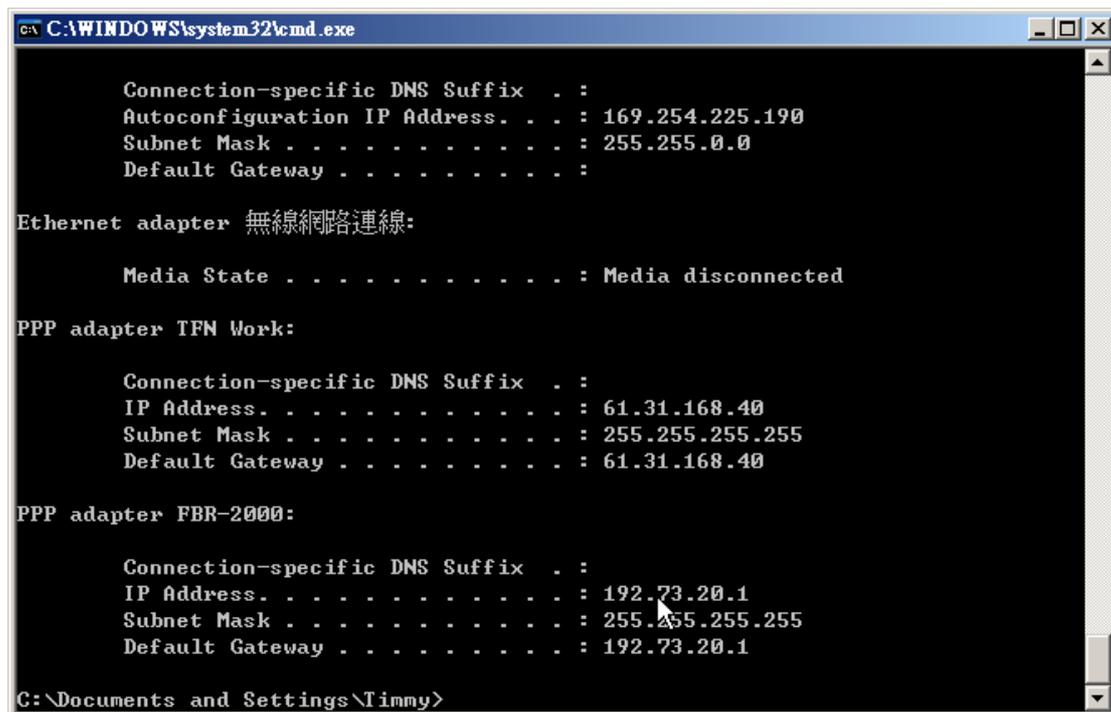

Note: You do not need to specify PPTP or L2TP as Windows will automatically determine which type of VPN server you are connecting to.