


How to configure IP Cam Secure to use Emap?


Scenario

IP Cam Secure support the function to pop up a picture (preferably map) to indicate the location of the IP Camera where event occurs.


Please go to <Main Console>-<Start> and then click on <E-map>

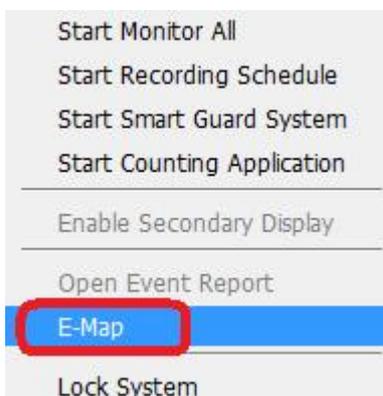


1. Click on <Map>
2. Click on <Browser/ Edit Mode>
3. Click on <Add Map>
4. Choose a map and then fill in the map name

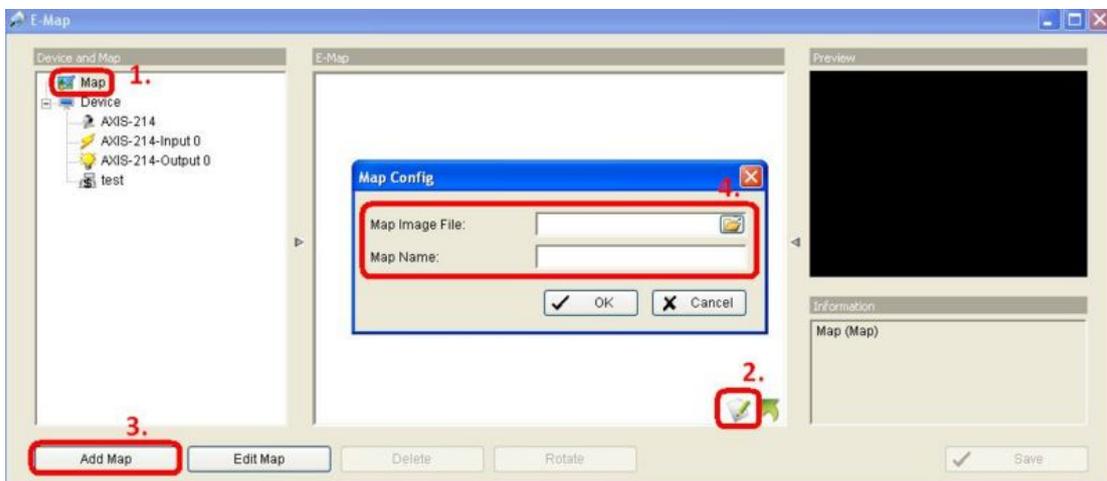

5. Click on the map you set
6. Draw the camera or IO device or POS to the map
7. Click on <OK> to save this setting

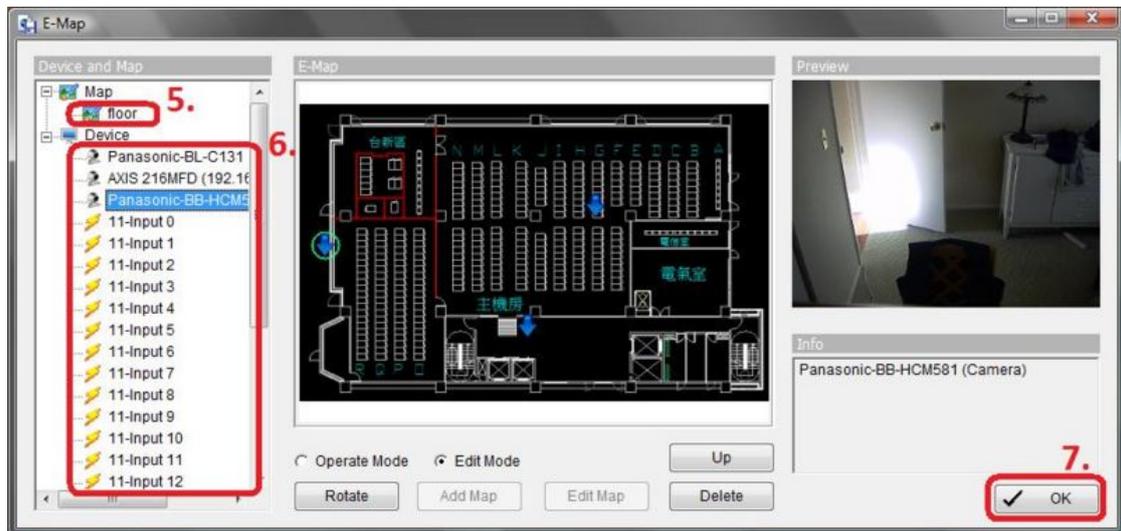


8. Go back to Main Console and click on <Guard>
9. Choose camera, IO device or POS which you want
10. Click on <Event> and choose one or more events you want

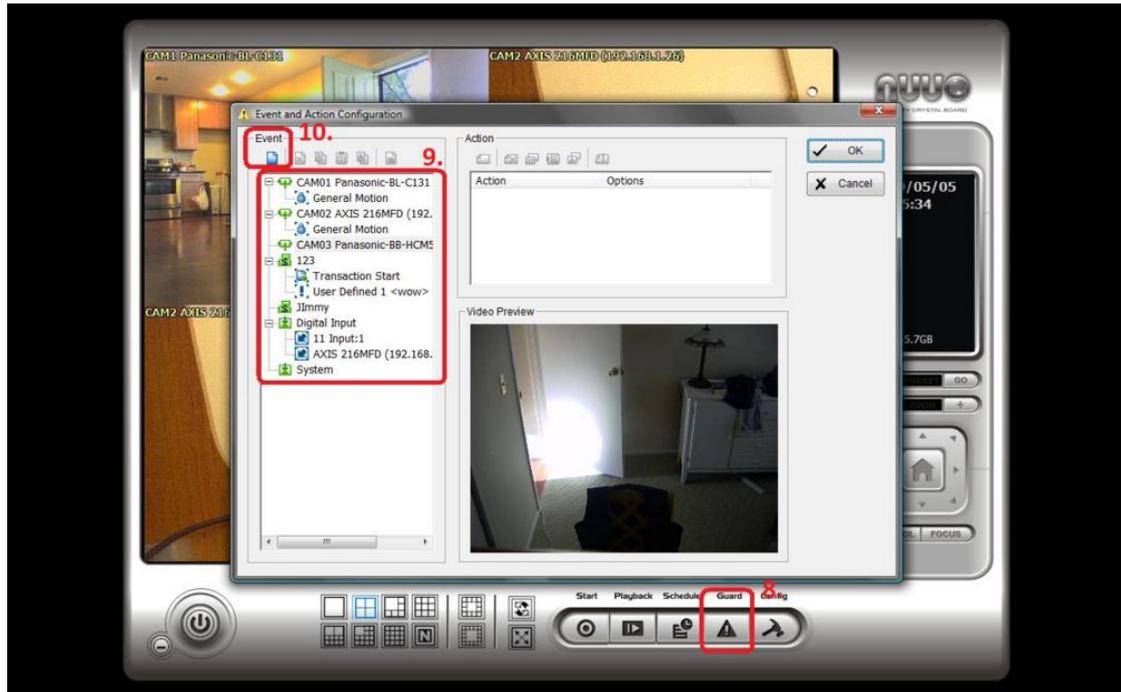

11. Click on <Action>


12. Choose <Popup E-map on Event> as your action, you can also set another action simultaneously

13. Click on <OK> to save this setting

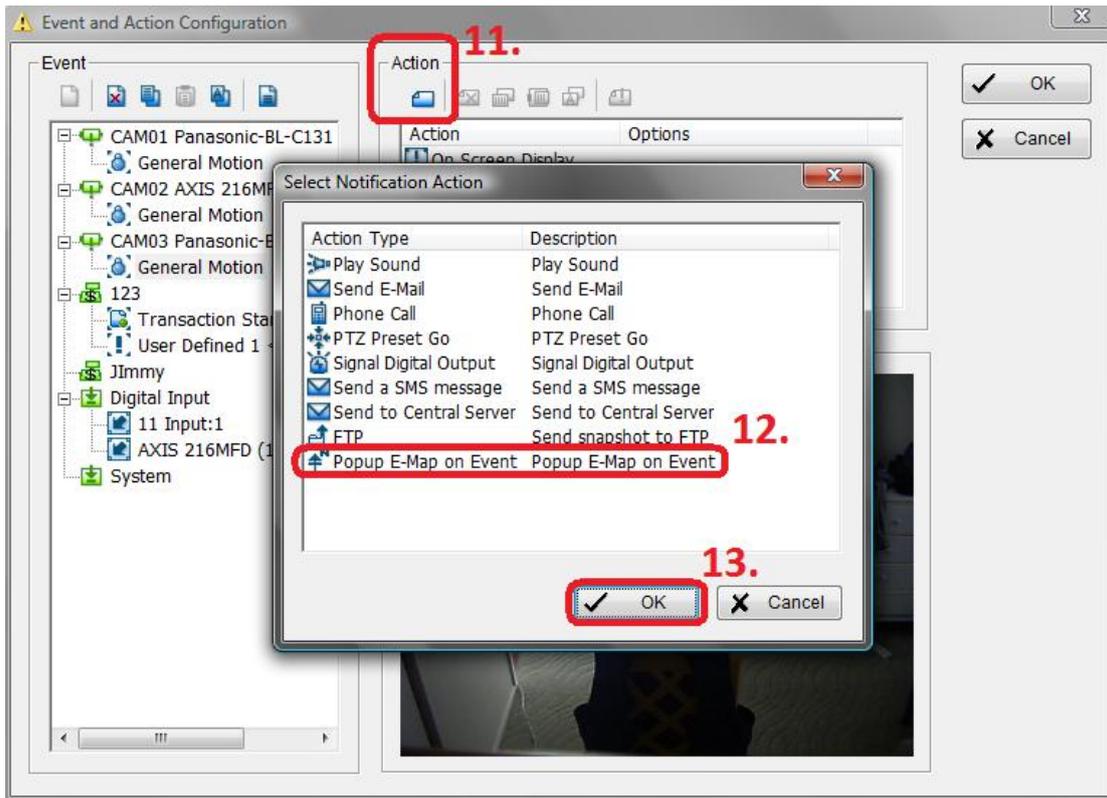

14. Choose <Map Layer>

15. Assign a specific camera which you want to display when an event is triggered. And then click on <OK> to save this setting.

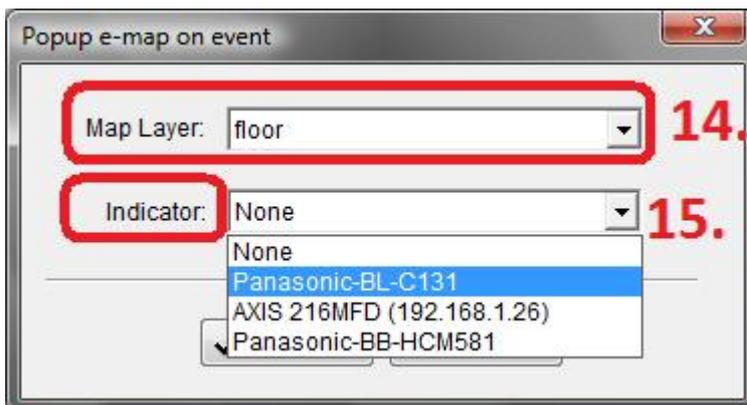

16. Go to <Main Console>-<Start> and then click on <Start Smart Guard System>



17. Emap will pop up when an event you configure in guard is triggered. You can find camera location in the emap and get the camera information and live video simultaneously.

