

# OAM Configuration Commands (GTL-2091)



Digital Data Communications GmbH, Germany.

<http://www.level1.com>

# Table of Contents

|  |    |
|--|----|
| Chapter 1 OAM Configuration Commands .....   | 1  |
| 1.1 OAM Configuration Commands .....   | 1  |
| 1.1.1 ethernet oam .....   | 1  |
| 1.1.2 ethernet oam {max-rate   min-rate   mode   timeout} .....  | 2  |
| 1.1.3 ethernet oam remote-failure {critical-event   dying-gasp   link-fault} action.....                                     | 3  |
| 1.1.4 ethernet oam remote-loopback {supported   timeout}.....  | 4  |
| 1.1.5 ethernet oam link-monitor {symbol-period   frame   frame-period   frame-seconds  <br>receive-crc} threshold high ..... | 5  |
| 1.1.6 ethernet oam link-monitor {symbol-period   frame   frame-period   frame-seconds  <br>receive-crc} threshold low.....   | 6  |
| 1.1.7 ethernet oam link-monitor {symbol-period   frame   frame-period   frame-seconds  <br>receive-crc} window.....          | 7  |
| 1.1.8 ethernet oam link-monitor high-threshold action.....   | 8  |
| 1.1.9 ethernet oam link-monitor negotiation-supported .....  | 9  |
| 1.1.10 ethernet oam remote-loopback {start   stop}.....  | 10 |
| 1.1.11 clear ethernet oam statistics .....   | 10 |
| 1.1.12 show ethernet oam discovery .....   | 11 |
| 1.1.13 show ethernet oam statistics {pdu   link-monitor   remote-failure}.....   | 13 |
| 1.1.14 show ethernet oam configuration.....  | 14 |
| 1.1.15 show ethernet oam runtime .....   | 15 |
| 1.1.16 debug ethernet oam remote-loopback.....   | 17 |
| 1.1.17 debug ethernet oam packet {tx   rx} .....   | 17 |
| 1.1.18 debug ethernet oam discovery-sm .....   | 18 |
| 1.1.19 debug ethernet oam error.....   | 18 |

# Chapter 1 OAM Configuration Commands

## 1.1 OAM Configuration Commands

The following are OAM configuration commands:

- ethernet oam
- ethernet oam {max-rate | min-rate | mode | timeout }
- ethernet oam remote-failure {critical-event | dying-gasp | link-fault } action
- ethernet oam remote-loopback {supported | timeout}
- ethernet oam link-monitor {symbol-period | frame | frame-period | frame-seconds | receive-crc} threshold high
- ethernet oam link-monitor {symbol-period | frame | frame-period | frame-seconds | receive-crc} threshold low
- ethernet oam link-monitor {symbol-period | frame | frame-period | frame-seconds | receive-crc} window
- ethernet oam link-monitor high-threshold action
- ethernet oam link-monitor negotiation-supported

### 1.1.1 ethernet oam

#### Description

**[no] ethernet oam**

To enable or disable the OAM function, run **[no] ethernet oam**.

#### Parameter

None

#### Default

Ethernet OAM is disabled by default.

#### Command mode

Port configuration mode

## Explanation

None

## Example

The following commands are used to enable the OAM function on GigaEthernet 0/2 interface.

```
Console#
Console#config
Console_config#interface g0/2
Console_config_g0/2#ethernet oam
```

## 1.1.2 ethernet oam {max-rate | min-rate | mode | timeout }

## Description

**[no] ethernet oam {max-rate *value1* | min-rate *value2* | mode {active | passive} | timeout *value3*}**

**ethernet oam max-rate *value1*** is used to set the fastest transmission rate of the OAM packet.

**ethernet oam max-rate *value2*** is used to set the slowest transmission rate of the OAM packet.

**ethernet oam mode {active | passive}** is used to set the OAM mode.

**ethernet oam timeout *value3*** is used to set the timeout time of the OAM connection.

## Parameter

| Parameter     | Description  |
|---------------|--|
| <i>value1</i> | Fastest transmission rate, which ranges between 1 and 10. Its unit is packet/second.       |
| <i>value2</i> | Slowest transmission rate, which ranges between 1 and 10. Its unit is second.              |
| <i>value3</i> | Timeout time of the OAM connection, which ranges between 2 and 30 and whose unit is second |

## Default

The value of **max-rate** is 10.

The value of **min-rate** is 1.

The value of **timeout** is 5.

The value of **mode** is **active**.

#### Command mode

Port configuration mode

#### Explanation

This command can be used to configure some optional parameters for establishing the OAM connection.

#### Example

The following example shows how to set the fastest and slowest connection rates of the OAM on the GigaEthernet 0/2 interface to 5 packets/second, the connection timeout time to 10 seconds and the OAM mode to **passive**.

```
Console #config
Console_config#
Console_config#interface g0/2
Console_config_g0/2# ethernet oam max-rate 5
Console_config_g0/2#ethernet oam min-rate 5
Console_config_g0/2#ethernet oam timeout 10
Console_config_g0/2#ethernet oam mode passive
```

### 1.1.3 ethernet oam remote-failure {critical-event | dying-gasp | link-fault } action

#### Description

**ethernet oam remote-failure {critical-event | dying-gasp | link-fault } action error-disable-interface**

**no ethernet oam remote-failure {critical-event | dying-gasp | link-fault } action**

This command is used to configure the trigger action after the remote fault instruction is received.

#### Parameter

None

#### Default

No trigger action is conducted after the remote fault instruction is received.

## Command mode

Port configuration mode

## Explanation

switch cannot generate the LINK FAULT packets and the Critical Event packets. However, these packets will be handled if they are received from the remote terminal. router can transmit and receive the Dying Gasp packet. When the local port enters the **errdisabled** state or is closed by the administrator or the OAM function of the local port is closed by the manager, the Dying Gasp packet will be transmitted to the remote terminal that connects the local port.

## Example

The following example shows how to set the GigaEthernet0/2 port as the access port of VLAN10:

```
Console(config)#interface f0/1
Console(config)#vlan10
Console(config-f0/1)#switchport pvid 10
```

## 1.1.4 ethernet oam remote-loopback {supported | timeout}

## Description

The command **ethernet oam remote-loopback supported** is used to configure the remote loopback function.

The **ethernet oam remote-loopback timeout value** is used to configure the timeout time of the remote loopback.

## Parameter

| Parameter     | Description  |
|---------------|--|
| <i>value3</i> | Timeout time of the OAM connection, which ranges between 1 and 10 and whose unit is second |

## Default

Two seconds

## Command mode

Port configuration mode

## Explanation

The timer is effective only to the loopback master terminal. If the slave terminal does not receive the response from the slave terminal in the regulated timeout time after the master terminal transmits the **start** or **stop** request, the system will exit the loopback mode automatically.

## Example

The following example shows how to set the timeout time of loopback on the GigaEthernet 0/2 port to 5 seconds.

```
Console_config_g0/2#ethernet oam remote-loopback timeout 5
```

### 1.1.5 ethernet oam link-monitor {symbol-period | frame | frame-period | frame-seconds | receive-crc} threshold high

## Description

**[no] ethernet oam link-monitor {symbol-period | frame | frame-period | frame-seconds | receive-crc} threshold high {none | value}**

To configure the high threshold for link monitoring, run the previous command.

## Parameter

| Parameter    | Description  |
|--------------|--|
| <i>Value</i> | <p>Error-signal period event ranges between 1 and 65535, whose unit is signal number.</p> <p>Error-frame event ranges between 1 and 65535, whose unit is frame number.</p> <p>Error-frame event ranges between 1 and 65535, whose unit is frame number.</p> <p>Error-frame second event ranges between 1 and 900, whose unit is second.</p> <p>Error-CRC event ranges between 1 and 65535, whose unit is frame number.</p> |

## Default

The default value of each general link event is **none**.

## Command mode

Port configuration mode

## Explanation

After the high threshold of an event and **ethernet oam link-monitor high-threshold action error-disable-interface** are configured, the local port enters the **errdisabled** state when the local port receives the high threshold of the event.

## Example

The following example shows how to configure the high threshold of the error-frame event to **10** on interface GigaEthernet0/2.

```
Console_config_g0/2#ethernet oam link-monitor symbol-period threshold high 10
```

### 1.1.6 ethernet oam link-monitor {symbol-period | frame | frame-period | frame-seconds | receive-crc} threshold low

## Description

**[no] ethernet oam link-monitor {symbol-period | frame | frame-period | frame-seconds | receive-crc} threshold low {none | value}**

To configure the low threshold for link monitoring, run the previous command.

## Parameter

| Parameter    | Description   |
|--------------|---|
| <i>Value</i> | <p>Error-signal period events ranges between 1 and 65535, whose unit is signal number.</p> <p>Error-frame event ranges between 1 and 65535, whose unit is frame number.</p> <p>Error-frame event ranges between 1 and 65535, whose unit is frame number.</p> <p>Error-frame second event ranges between 1 and 900, whose unit is second.</p> <p>Error-CRC event ranges between 1 and 65535, whose unit is frame number.</p> |

## Default

The default value of the error-signal period event is 1.

The default value of the error-frame event is 1.

The default value of the error-frame period event is 1.

The default value of the error-frame second event is 1.

The default value of the error-CRC event is 10.



## Command mode

Port configuration mode

## Explanation

After the low threshold of an event is configured and the locally-received event exceeds the low threshold, the Event Notification OAM packet will be transmitted to notify the peer terminal.

## Example

The following example shows how to set the low threshold of the error-frame event to **10** on interface GigaEthernet0/2.

```
Console_config_g0/2#ethernet oam link-monitor symbol-period threshold low 10
```

### 1.1.7 ethernet oam link-monitor {symbol-period | frame | frame-period | frame-seconds | receive-crc} window

## Description

**ethernet oam link-monitor {symbol-period | frame | frame-period | frame-seconds | receive-crc} window *value***

To configure the size of the round-query window for link monitoring, run the previous command.

## Parameter

| Parameter    | Description  |
|--------------|--|
| <i>Value</i> | <p>The error-signal period event ranges between 10 and 600 on GigaEthernet and ranges between 1 and 60 on FastEthernet. The unit is 100M signals.</p> <p>The error-frame event ranges between 1 and 60, whose unit is second.</p> <p>The error-frame period event ranges between 100 and 6000 on GigaEthernet and ranges between 10 and 600 on FastEthernet. The unit is 14881 frames.</p> <p>Error-frame second event ranges between 10 and 900, whose unit is second.</p> <p>The error-CRC event ranges between 1 and 180, whose unit is second.</p> |

## Default

The default value of the error-signal period event is 10 on GigaEthernet and is 1 on FastEthernet.

The default value of the error-frame event is 1.

The default value of the error-frame period event is 100 on GigaEthernet and is 10 on FastEthernet.

The default value of the error-frame second event is 60.

The default value of the error-CRC event is 1.

## Command mode

Port configuration mode

## Explanation

None

## Example

The following example shows how to set the window of the error-frame period event to **50** on interface GigaEthernet0/2.

```
Console_config_g0/2#ethernet oam link-monitor symbol-period window 50
```

### 1.1.8 ethernet oam link-monitor high-threshold action

## Description

**ethernet oam link-monitor high-threshold action error-disable-interface**

**[no] ethernet oam link-monitor high-threshold action**

To configure the link-monitor trigger event with the high threshold, run **ethernet oam link-monitor high-threshold action error-disable-interface**.

## Parameter

None

## Default

The high-threshold trigger event does not exist by default.

## Command mode

Port configuration mode

## Description

After the high threshold of an event and **ethernet oam link-monitor high-threshold action error-disable-interface** are configured, the local port enters the **errdisabled** state when the local port receives the high threshold of the event.

## Example

The following example shows how to set the high-threshold trigger event on interface GigaEthernet 0/2 to **error-disable-interface**.

```
Console_config_g0/2#ethernet oam link-monitor high-threshold action
error-disable-interface
```

### 1.1.9 ethernet oam link-monitor negotiation-supported

## Description

**[no] ethernet oam link-monitor negotiation-supported**

To configure the link-monitor negotiation, run **ethernet oam link-monitor negotiation-supported**.

## Parameter

None

## Default

Link-monitor negotiation is supported.

## Command mode

Port configuration mode

## Description

devices support link monitoring. However, if the third-party devices do not support link monitoring, devices automatically do not support link monitoring during OAM Discovery and the OAM connection can be established through the third-party devices in this case. Otherwise, when the link-monitor negotiation is not configured, devices mandatorily support the link-monitor function, but the OAM connection cannot be created if the third-party devices do not support the link-monitor function.

### Example

The following example shows that the link-monitor function is not supported on interface GigaEthernet 0/2.

```
Console_config_g0/2#no ethernet oam link-monitor negotiation-supported
```

#### 1.1.10 ethernet oam remote-loopback {start | stop}

### Description

**ethernet oam remote-loopback {start | stop} interface intf-type intf-id**

To start or stop the remote OAM loopback, run the previous command.

### Parameter

| Parameter      | Description              |
|----------------|--------------------------|
| <i>intf-id</i> | Designates an interface. |

### Default

None

### Command mode

Privileged mode

### Description

The remote OAM loopback cannot be enabled on the physical interface that belongs to the aggregation interface.

### Example

The following example shows how to positively start the remote OAM loopback on interface GigaEthernet 0/2.

```
Console#ethernet oam remote-loopback start interface g0/2
```

#### 1.1.11 clear ethernet oam statistics

### Description

**clear ethernet oam statistics [interface intf-type intf-id]**

To clear the OAM statistics information, run the previous command.

## Parameter

| Parameter             | Description   |
|-----------------------|---|
| <b><i>intf-id</i></b> | Designates an interface. If an interface is not designated, the OAM statistics information on all interfaces will be deleted. |

## Default

None

## Command mode

Privileged mode

## Description

After this command is run, the following statistics information (type-classified packet numbering information, link-event statistics information and remote trouble statistics information) is deleted meanwhile.

## Example

The following example shows how to clear the OAM statistics information on interface GigaEthernet 0/2.

```
Console#clear ethernet oam statistics interface g0/2
```

## 1.1.12 show ethernet oam discovery

## Description

**show ethernet oam discovery interface [intf-type intf-id]**

To display the OAM discovery information on all interfaces or a designated interface, run the previous command.

## Parameter

| Parameter             | Description  |
|-----------------------|--|
| <b><i>intf-id</i></b> | Displays the Discovery information on the designated interface or on all protocol-up ports and enables the Discovery information on the OAM interface. |

## Default

None

## Description

None

## Example

The following example shows how to display the OAM discovery information on interface GigaEthernet 0/2.

```
Console_config_g0/2#show ethernet oam discovery interface g0/2
```

```
GigaEthernet0/2
```

```
Local Info TLV
```

```
-----
```

```
PDU revision:      1
```

```
Loopback status:   LB_DISABLED
```

```
OAM configurations field:
```

```
Mode                : active
Unidirection        : not supported
Remote loopback     : supported
Link Events         : supported
Variable retrieval: not supported
```

```
Mtu size:          1500
```

```
OUI:                00e00f
```

```
Remote Info TLV
```

```
-----
```

```
MAC address:        001b.0d9c.e703
```

```
PDU revision:      0
```

```
OAM configurations field:
```

```
Mode                : active
Unidirection        : not supported
Remote loopback     : not supported
Link Events         : supported
Variable retrieval: not supported
```

```
Mtu size:          1500
```

```
OUI:                00000c
```

### 1.1.13 show ethernet oam statistics {pdu | link-monitor | remote-failure}

#### Description

**show ethernet oam statistics {pdu | link-monitor | remote-failure} interface [intf-type intf-id]**

To display the OAM statistics information on a designated interface or all interfaces, run the previous command.

#### Parameter

| Parameter      | Description  |
|----------------|--|
| <i>intf-id</i> | Displays the statistics information on the designated interface or on all protocol-up ports and enables the statistics information on the OAM interface. |

#### Default

None

#### Description

None

#### Example

The following example shows how to display the classified OAM packet numbering information on interface GigaEthernet 0/2.

```
Console#show ethernet oam statistics pdu interface g0/2
```

```
GigaEthernet0/2
```

```
Counters:
```

```
-----
```

```
Information OAMPDU Tx           : 59
Information OAMPDU Rx           : 56
Unique Event Notification OAMPDU Tx : 0
Unique Event Notification OAMPDU Rx : 0
Duplicate Event Notification OAMPDU TX: 0
Duplicate Event Notification OAMPDU RX: 0
Loopback Control OAMPDU Tx      : 0
Loopback Control OAMPDU Rx      : 0
Variable Request OAMPDU Tx      : 0
Variable Request OAMPDU Rx      : 0
Variable Response OAMPDU Tx     : 0
Variable Response OAMPDU Rx     : 0
```

```

Organization Specific OAMPDU Tx      : 0
Organization Specific OAMPDU Rx      : 0
Unsupported OAMPDU Tx                : 0
Unsupported OAMPDU Rx                : 0
Frames Lost due to OAM                : 0

```

#### 1.1.14 show ethernet oam configuration

##### Description

##### **show ethernet oam configuration interface [intf-type intf-id]**

To display the OAM configuration information on all interfaces or a designated interface, run **show ethernet oam configuration interface [intf-type intf-id]**.

##### Parameter

| Parameter             | Description  |
|-----------------------|--|
| <i><b>intf-id</b></i> | Displays the OAM configuration information on the designated interface or on all protocol-up ports and enables the configuration information on the OAM interface. |

##### Default

None

##### Description

None

##### Example

The following example shows how to display the OAM configuration information on interface GigaEthernet 0/2.

```
Console#show ethernet oam configuration interface g0/2
```

```
GigaEthernet0/2
```

```
General
```

```
-----
```

```

Admin state      : enabled
Mode             : active
PDU max rate     : 10 packets/second
PDU min rate     : 1 seconds/packet
Link timeout     : 1 seconds
High threshold action: no action

```

```
Remote Failure
```

```
-----
```



Link fault action : no action  
Dying gasp action : no action  
Critical event action: no action

#### Remote Loopback

-----

Is supported : supported  
Loopback timeout : 2

#### Link Monitoring

-----

Negotiation : supported  
Status : on

#### Errored Symbol Period Event

Window : 10 \* 100M symbols  
Low threshold : 1 error symbol(s)  
High threshold : none

#### Errored Frame Event

Window : 1 seconds  
Low threshold : 1 error frame(s)  
High threshold : none

#### Errored Frame Period Event

Window : 100 \* 14881 frames  
Low threshold : 1 error frame(s)  
High threshold : none

#### Errored Frame Seconds Summary Event

Window : 60 seconds  
Low threshold : 1 error second(s)  
High threshold : none

#### Errored CRC Frames Event

Window : 1 seconds  
Low threshold : 10 error frame(s)  
High threshold : none

### 1.1.15 show ethernet oam runtime

#### Description

##### **show ethernet oam runtime interface [intf-type intf-id]**

To display the OAM running information on all interfaces or a designated interface, run the previous command.

## Parameter

| Parameter             | Description  |
|-----------------------|--|
| <b><i>intf-id</i></b> | Displays the Runtime information on the designated interface or on all protocol-up ports and enables the Runtime information on the OAM interface. |

## Default

None

## Description

None

## Example

The following example shows how to display the OAM Runtime information on interface GigaEthernet 0/2.

```
Console#show ethernet oam runtime interface g0/2
```

```
GigaEthernet0/2
```

```
Runtime Settings:
```

```
-----
```

```
local_pdu      : NOT_WORKING
```

```
local_mux      : FWD
```

```
local_par      : FWD
```

```
local_link_status : OK
```

```
local_satisfied : FALSE
```

```
local_stable    : FALSE
```

```
pdu_cnt        : 10
```

```
pdu_timer       : stopped
```

```
lost_link_timer : stopped
```

```
remote_state_valid: FALSE
```

```
remote_stable    : FALSE
```

```
remote_evaluating : FALSE
```

```
Discovery State Machine:
```

```
-----
```

```
Last 10 state transition recorded: INACTIVE -> FAULT -> ACTIVE_SEND_LOCAL -> SEND_LOCAL_REMOTE -> SEND_LOCAL_REMOTE_OK -> SEND_ANY -> INACTIVE
```

### 1.1.16 debug ethernet oam remote-loopback

#### Description

##### **debug ethernet oam remote-loopback**

To enable the debugging switch of remote OAM loopback, run the previous command.

#### Parameter

None

#### Default

None

#### Command mode

Privileged mode

#### Description

When this command is run, the state switchover process of the remote state machine will be displayed.

### 1.1.17 debug ethernet oam packet {tx | rx}

#### Description

##### **debug ethernet oam packet [tx | rx]**

To enable the debugging switch of the OAM output packet's content, run the previous command.

#### Parameter

None

#### Default

None

#### Command mode

Privileged mode

**Description**

If **tx** and **rx** are not entered and the **Enter** key is pressed directly, all received and transmitted OAM PDU content will be exported and the remaining length of the frame-header-excluded packet will be displayed. **tx** means to export only the content of the transmitted OAM PDU; **rx** means to export only the content of the received OAM PDU.

**Example**

omitted

**1.1.18 debug ethernet oam discovery-sm****Description****debug ethernet oam discovery-sm**

To open the debugging switch of the OAM discovery state machine, run the previous command.

**Parameter**

None

**Default**

None

**Command mode**

Privileged mode

**Description**

None

**Example**

omitted

**1.1.19 debug ethernet oam error****Description****debug ethernet oam error**

To open the error-treated debugging switch of the OAM packet, run the previous command.

**Parameter**

None

**Default**

None

**Command mode**

Privileged mode

**Description**

None

**Example**

omitted