



IED-1010

1-Port RS-232/422/485 Industrial Serial Device Server 1-FX SC MM 2KM

Quick Installation Guide

v1.00 - 1210

Features

- Supports 1-port RS-232/422/485 serial communication
- Supports 1-port 100FX SC MM 2KM Fibre
- 15KV ESD surge protection
- 64KB port memory buffer prevents data loss when connection failed
- Virtual COM, TCP Server, TCP Client, UDP and Pair Connection
- Web, Telnet, SNMP and Windows based utility management
- Terminal Block and latch secure DC Jack power inputs
- DIN-rail mounting with aluminium housing
- -10 to 60 Celsius operating temperature

Package Contents

- IED-1010
- Quick Installation Guide
- CD User Manual / Utility

Overview

The IED-1010 is an Industrial Ethernet to serial converter, also called the Ethernet Terminal Server or the Serial Device Server for industrial use in harsh environments. The serial interface is selectable between RS-232 / RS-422 / RS-485 and the Ethernet interface supports TCP, UDP, ICMP, IGMP, HTTP, ARP networking protocols. This device is designed for easy installation; setting up is a breeze with included Windows based driver software that gives the local COM port, retaining existing software applications to be connected just as if they were attached locally. It can also be set up remotely over the local network or internet using Telnet, SNMP or web browser.

Management

Supports a variety of management features including: CLI via Telnet; Graphic User Interface via Web Browser or Simple Network Management Protocol via SNMP tools. It provides better visibility and management of those critical assets. Also, the Windows based driver software provides the local COM port, allowing the application to control the serial device across the local network as it is attached locally.

Safety

The Serial Device Server is FCC and CE approved with 15KV ESD surge protection, and meets RoHS hazardous materials standards. The Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment 2002/95/EC which commonly referred to as the Restriction of Hazardous Substances Directive or RoHS

IED-1010 Page 1

LED Status



 
LED	Status	Description	
Power1, 2 Power On		Power On	
l ower 1, 2	Off	Power Off	
Status	Steady	Device Server is not utilised by Xport utility	
(Orange)	Flashing	Device Server is utilised by Xport utility	

Ethernet Port: 10/100Base-TX, 100Base-FX

LAN (Yellow)	Steady Flashing Off	Network connection is established Transmitting or Receiving data No connection occurred
Serial Port	Oli	No connection occurred
Port TX/RX (Yellow)	Flashing	Transmitting or Receiving data

IED-1010 Page 2 IED-1010 Page 3

Power Input




Power1 (Terminal Block)	12 – 32VDC (+), Power Ground (-)	
Power2 (DC Jack)	12VDC	
\begin{align*}	Earth Ground	

Note

There are Terminal Block and DC Jack power inputs can be used to power up this device. Redundant power supplies function is supported.

 Serial Port Pin Assignment



PIN RS-232 RS-422 (4-wire RS-485) RS-485 (2-wire) 1 DCD TxD + TxD + 2 RxD RxD - D - 3 TxD RxD + D + 4 DTR DTR Signal GND Signal GND 6 DSR TxD TxD TxD				
1 DCD TxD+ 2 RxD RxD- D- 3 TxD RxD+ D+ 4 DTR 5 Signal GND Signal GND Signal GND 6 DSR	PIN	RS-232	RS-422	RS-485
2 RxD RxD - D - 3 TxD RxD + D + 4 DTR 5 Signal GND Signal GND Signal GND 6 DSR			(4-wire RS-485)	(2-wire)
3 TxD RxD+ D+ 4 DTR 5 Signal GND Signal GND Signal GND 6 DSR Signal GND Signal GND </td <td>1</td> <td>DCD</td> <td>TxD+</td> <td></td>	1	DCD	TxD+	
4 DTR 5 Signal GND Signal GND Signal GND 6 DSR	2	RxD	RxD -	D -
5 Signal GND Signal GND Signal GND 6 DSR	3	TxD	RxD+	D+
6 DSR	4	DTR		
	5	Signal GND	Signal GND	Signal GND
7 DTC TvD	6	DSR		
/ N13 IXD-	7	RTS	TxD -	
8 CTS	8	CTS		
9 RJ	9	RJ		

 IED-1010
 Page 4
 IED-1010
 Page 5

Default Setting

The default settings of Serial Device Server are shown in the following:


Ethernet Port		
IP Address	192.168.1.10	
Port	601 (1st Port)	
Gateway		
Subnet Mask	255.255.255.0	
Security		
Password	admin	
Serial		
COM	9600/None/8/1, No flow control	
Link Mode	TCP Server, TCP port 601	

Reset button:

- Reboot Device: Press Reset button for 0~10 secs, Status LED flashes every 500 ms
- Default Password: Press Reset button for 11~30 secs, Status LED flashes every 200 ms
- Factory Default: Press Reset button for over 30 secs, Status LED flashes every 1 sec.

Configuration

Xport utility allows user to configure the device IP or map a serial port to a COM port on the PC, etc.

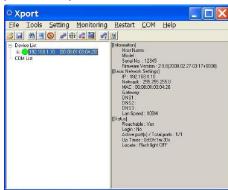

User can also configure the device via web browser



Please refer to User Manual for more details