


LevelOne

**VDS-0201** 

**VDSL2 Ethernet Converter (AnnexB)** 

**Quick Install Guide** 

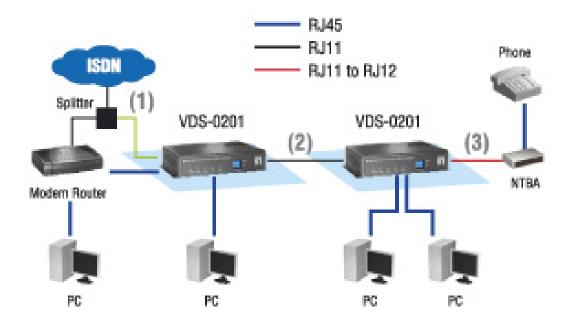

1) Cable for connection between ISDN Splitter and VDS-0201 Master:

Use a cable with TAE-F connector PINs 1+2 to RJ-11 6p2c Pins (3+4) for the connection from ISDN Splitter to the PHONE Port of VDS-0201.

- Connection between VDS-0201 Master and VDS-0201 Slave
  Use a RJ-11 6p2c Pins (3+4) for connecting the DSL Ports of VDS-0201 Master and VDS-0201 Slave
- 3) Connection between VDS-0201 Slave and ISDN NTBA (USE RJ11 to RJ12 cable)

Connect the RJ-11 Pins (3+4) connector to VDS-0201 Slave side and RJ-12 Pins (1+6)connector to NTBA

Note.: You can refer the connector as following drawing:

TAE-F 6p2c (contact 3,4) 6p2c (contact 1,6)

